


ANALOG MULTI TIMER

SHIVA **Amvaj**

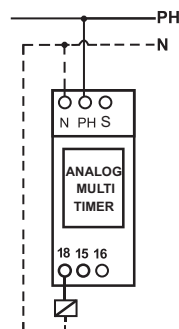

If terminal SELECT connected to phase, the device functions as minute timer ;otherwise (not connected) it functions as second timer



VER:9801

1

5

SHIVA **Amvaj**

SHIVA **Amvaj**

Device Introduction

ShivaAmvaj Multi timer is designed in a small size with high accuracy and stability in repetition and panel security lock (in order to prevent unauthorized access)

This device works as a delay on timer for connection.

It can be used in commercial, industrial and residential places.

after selecting timer mode, adjust intended time from 1 to 60 then connect input power.

On second timer mode the indicator starts blinking fast and on the minute timer mode , indicator starts blinking slowly.

after finishing adjusted time the

output relay gets connected permanently and indicator remains turned on.

In order to start timing again input power must be disconnected and connected.

2

6

SHIVA **Amvaj**

SHIVA **Amvaj**

Features

- accuracy and stability
- Indicators with four different status
 - OFF: Power Outage
 - Fast Blinking : Minute Timer Status
 - Slow Blinking :Second timer status
 - ON: Realy Connection
- Options
 - Time adjustment
 - Seal of device panel
 - Simple and easy in stallation on rail and other surfaces
- Equipped with standard terminals
- No change in adjusted time due to contactor impact

3
year
GUARANTEE

Respecting the customer is our duty

3 year no question asked guarantee under these condition:

- 1-at most it should be within 3 years from the date printed on the label of the product
- 2-the label on the product should be safe and sound

3

7


SHIVA **Amvaj**

SHIVA **Amvaj**

Technical Specifications

- Supply voltage : 180-250 VAC / 50-60HZ
- On Delay : 1-60 Sec
- Operating condition
 - 20°C +65°C
 - Humidity: 70%
- Output :5A relay

Shiva Amvaj products in accordance with international standards and with a 3 year no question asked guarantee are presented

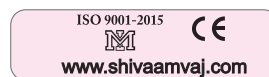

customer support: (+98)3135723690-1
sale: (+98)3135723444-5 fax: (+98)3135723400
Email: info@shivaamvaj.com

Shiva Amvaj Company is also presenting services in cyberspace
Shiva Amvaj number: 00989134034351

Installation Instruction

First install timer on the rail inside panel and wire based on scheme.

Connect input phase to terminal 15 and output to terminal 16 or 18 considering productivity condition.

4

8