SHIVA AMVAJ STAIRWAY TIMER



SHIVA Movaj

This device works in two different modes:

AUTO:

Set your desired time from1 to 10 minutes. Then put the key placed on device to A mode and connect input electricity. By pressing each of switches, lamps get turned on and after passing time they get adjusted and

MANUAL:

In parties or times when you want lamps to remain turned on, put the key placed on device to M mode. Now by pressing one of switches, lamps get turned on permanently. To make lamps get turned on, it is necessary to return key to A mode in order to make lamps get turned off after time passing.



Device Introduction


By using shiva amvaj stairway timer it is possible to control luminance of stairways, parking lot, yard, small depots and generally places that don't need permanent luminance in order to save energy.

Features

- Save energy and increase lamps' useful life
- Accuracy at time repeating
- 2 indicators to announce AC: grid's electricity
 REL: relay connection
- Equipped with Manual(M) and automatic(A) key Time adjustment screw

Warning: if the key is in M position and lamps are lighted and input electricity keeps connecting and disconnecting, by pressing one of switches, lamps get turned on .

Note: use the contactor with high-ampere for excessive loads of maximum allowed load table

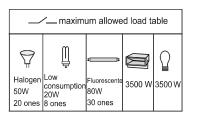



■ Capability to

Instal an infinite number of switches

seal panel

be installed on the rail and other surfaces easily

■ Small size

Technical specifications

■ Supply voltage : 180-250VAC/50-60HZ

■ Disconnection delay time : 1-10 min

■ Efficiency at Temperature : -20°C .. +65°C Humidity : 70%

 $\bullet \quad \text{Device consumption in waiting mode :} \underline{\sim} \, 0 \\$

Output : 16A relay



Respecting the customer is our duty

3 year no question asked guarantee under these condition:

 
1-at most it should be within 3 years from the date printed on the label of the product

2-the label on the product should be safe and sound



Installation Instruction

Install the timer inside panel on the rail. Then wire based on schematic.



Shiva Amvaj products in accordance with international standards and with a 3 year no question asked guarantee are presented



customersupport: (+98)3135723690-1
sale: (+98)3135723444-5fax: (+98)3135723400
Email: info@shivaamvaj.com
ShivaAmvajCompanyisalsopresentingservicesincyberspace
ShivaAmvajnumber: 00989134034351